

### Clamps / Position Indicators / Rotation Limiters

**K4 US** Clamp. Fits shafts 3/8" to 3/4".

**K4-1 US** Jackshaft Clamp. Fits jackshafts up to 1.05".

**K4-2 US** Standard Clamp. Fits shafts 1/2" to 1.05".

**K4-H** Hex Shaft clamp. Fits hex shafts 3/8" to 5/8".

**IND-AF2** Damper Position Indicator.  
For damper position indication in short shaft installations.

**ZDB-AF2 US US** Angle of Rotation Limiter for AF/NF actuators. Includes IND-AF2.

**KH-AFV** V-Bolt Kit allows for direct coupling with KH-LF.  
Contains V-Bolt and 2 nuts.



### Shaft Adaptors / Extensions

**AV8-25** Shaft Extension. For damper operating shafts.  
Approx. 6-5/8" [170 mm] extension for shafts  
1/4" to 3/4" [6 to 20 mm].



The shaft adaptors listed below may be used with AF/NF actuators.  
For more information see page 410.

**ZG-JSA-1 ZG-JSA-2 ZG-JSA-3**


### Non-Direct Mounting

**ZG-AF US** Crank Arm Adaptor Kit  
For more information see page 402.

**ZG-AF108** Crank Arm Adaptor Kit  
For more information see page 398.

**KH-AF** Crank Arm  
Fits round shafts up to 3/4".

**KH-AF-1 US** Crank Arm for Jackshaft Applications  
Fits round shafts up to 1.05".

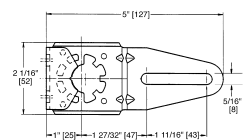

### Mounting Brackets

The mounting brackets listed below may be used with AF/NF actuators.  
For more information see pages 395, 398, 400 and 405.

**ZG-100 ZG-101 ZG-102 ZG-106 ZG-107 ZG-108**

### Housings

The housings listed below may be used with AF/NF actuators.  
For more information see pages 411 to 415.

**ZS-100 ZS-150 ZS-260 ZS-300**

### Miscellaneous

**AF-P** Anti-Rotation T-Bracket for AF/NF.

M40024 - 05/10 - Subject to change. © Belimo Aircontrols (USA), Inc.