

- D Montageanweisung
- F Instructions d'Installation
- I Istruzioni per l'Installazione
- NL Installatievoorschrift
- DK Installationsinstruks
- N Installationsinstrukjoner
- SF Asennusohje
- S Installations Instruktioner
- E Instrucciones de montaje

3 Nm, 5 Nm Series Spring Return Sylk Communicating Direct Coupled Actuators

MS3103J, MS3105J

MOUNTING INSTRUCTIONS

A

ASSEMBLY
D EINBAU
F MONTAGE
I MONTAGGIO
NL MONTAGE
DK MONTERE
N MONTERING
SF ASENNAMINEN
S MONTERA
E MONTAJE

M13968

A1, A4

M13969

A2

M13970

A3

M12030

A5


M13971

A6

M13972

27 Nm (max.)
240 lb-in.



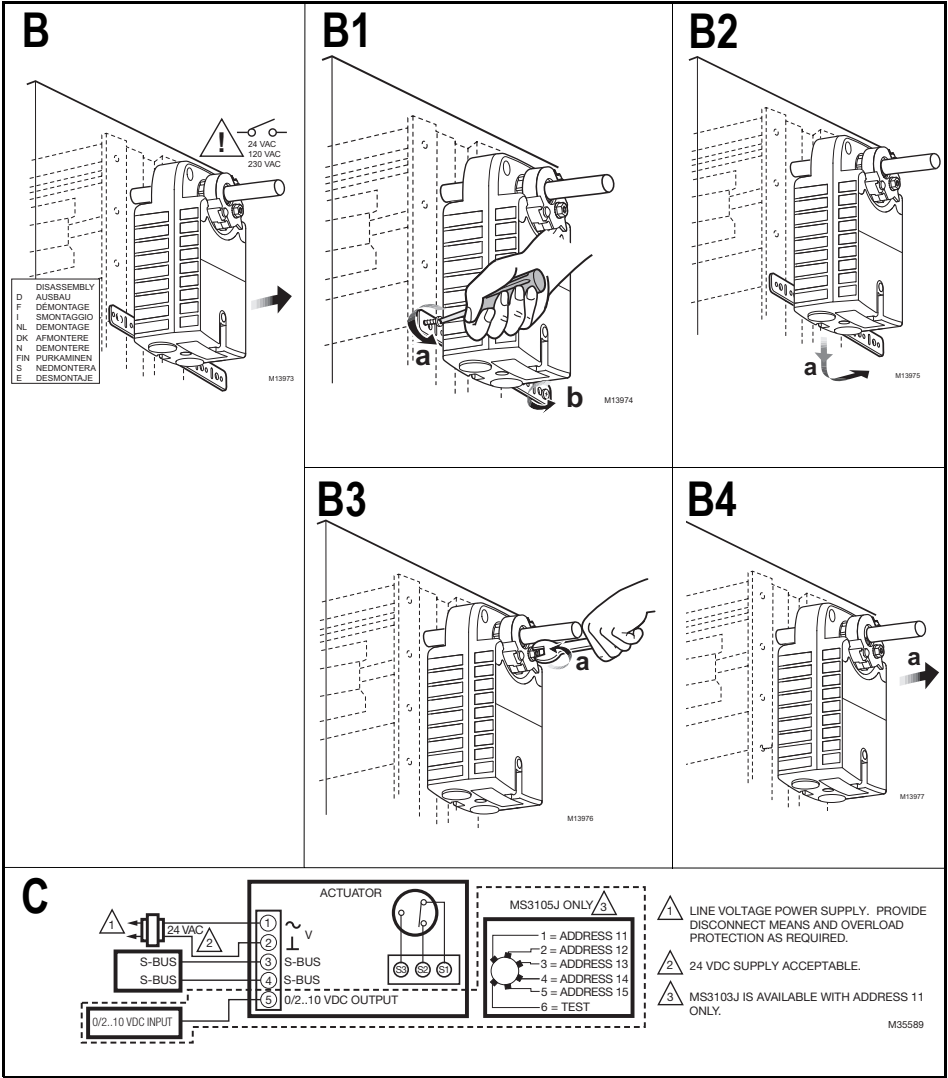

By using this Honeywell literature, you agree that Honeywell will have no liability for any damages arising out of your use or modification to the literature. You will defend and indemnify Honeywell, its affiliates and subsidiaries, from and against any liability, cost, or damages, including attorneys' fees, arising out of, or resulting from, any modification to the literature by you.

Automation and Control Solutions

Honeywell International Inc.
 1985 Douglas Drive North
 Golden Valley, MN 55422
 customer.honeywell.com



© U.S. Registered Trademark
 © 2015 Honeywell International Inc.
 62-0354—03 M.S. Rev. 06-15
 Printed in United States