

AA49



AA49 Triac Adapter

Installer's Specifications

Input Voltage	24VAC, 30VAC max.
Triac Input Current	25mA per input
Outputs	N.O. (closes to GND)
Output Ratings	150Ω closed contact resistance, 125mW max.
Operating Temperature Range	5° to 60°C (41° to 140°F)

NOTICE

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- Read and understand the instructions before installing this product.
- Turn off all power supplying equipment before working on it.
- The installer is responsible for conformance to all applicable codes.

INSTALLATION

1. Disconnect the EP3 from the power supply.
2. Wire the AA49 to the EP3 as shown.
3. Re-configure the EP3 as indicated: Set the input switch to "Tristate," and set the tri-pull-up jumper to "Off."
4. Reconnect power to the EP3.

WIRING

PRODUCT IDENTIFICATION

AA49 EP3 Triac Adapter

OPERATION

Use the AA49 adapter to connect the EP3 electro pneumatic transducer to the digital controller when the EP3 output is set to tristate.

DIMENSIONS

