

Hydrotrol™ Flow Control Valve

Operational Limits

Max Temperature	250°F (121°C)
Max Pressure	150psig (10 Bar)

INSTALLER: PLEASE LEAVE THIS MANUAL FOR THE OWNER'S USE.



SAFETY INSTRUCTION

This safety alert symbol will be used in this manual to draw attention to safety related instructions. When used, the safety alert symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED! FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN A SAFETY HAZARD.**

DESCRIPTION

The Hydrotrol (HT) valve is used for preventing gravity flow in forced water systems and to permit summer-winter operation of indirect water heater. The HT valve is a flow control valve designed to permit installation in either horizontal or vertical pipes.

INSTALLATION INSTRUCTIONS

1. Install HT valve in a hydronic piping system with the arrow on the body in the direction of the flow.
2. See installation drawings for additional information.



CAUTION: The generous use of pipe joint compound when installing the Hydrotrol valve will foul the valve operating mechanism preventing it from functioning properly. Pipe joint compound must be conservatively applied to male threads only. Failure to follow these instructions could result in property damage and/or moderate personal injury.



WARNING: System fluids under pressure or temperature can be hazardous. Be sure the pressure has been reduced to zero and the system temperature is below 100°F (38°C). Failure to follow these instructions could result in property damage and/or personal injury.





CAUTION: Over-tightening and breakage can occur with the use of teflon pipe joint compounds. Teflon provides lubricity so that care must be exercised not to over-tighten joints. Failure to follow these instructions could result in property damage and/or personal injury.

Bell & Gossett



ITT Industries
Engineered for life

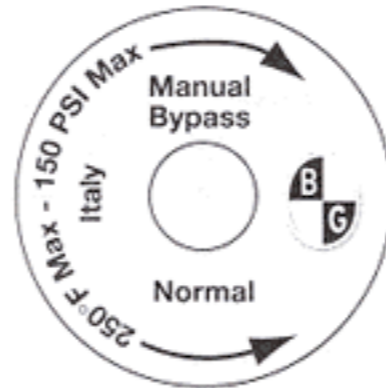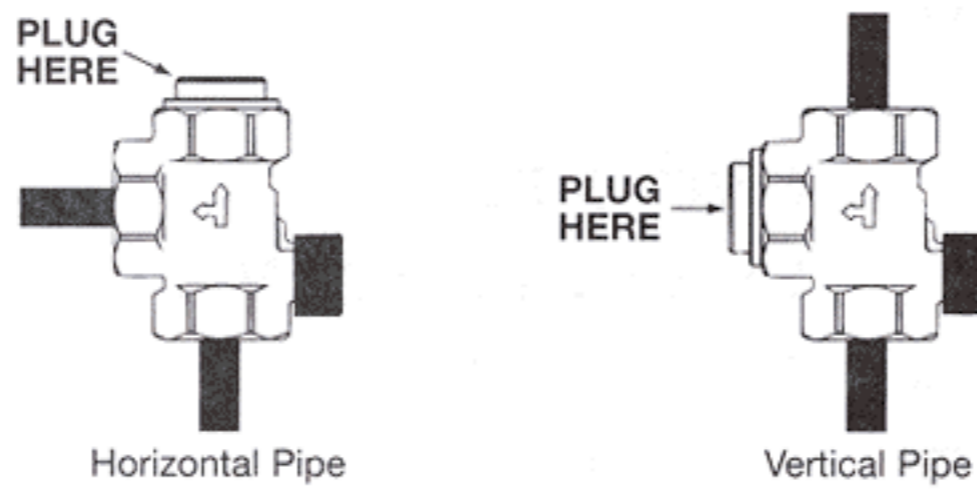

OPERATING INSTRUCTIONS

The Hydrotrol valve allows fluid to pass when the system pump starts. When the pump is not operating, the HT valve remains closed, preventing gravity circulation. HT valves are designed with a knob that can be manually opened for draining the system or bypass purposes. The knob should be turned counter clockwise to the "normal" position during operation. The knob can be turned clockwise to the "manual bypass" position in emergency situations whenever electrical power is lost and only partial heating is possible. **IMPORTANT:** Make sure the HT valve is returned to the "normal" operating position if the manual flow feature was used for any reason. If the knob is in the "manual bypass" position during normal system operation, uncontrolled heating of room radiation will occur.

SERVICE INSTRUCTIONS

There is no service required for the HT valve.



CAUTION: Corrosion or leakage of the HT valve can cause damage or injury. Periodically inspect the HT valve for signs of leakage or corrosion. If corrosion or leakage is noted, the HT valve must be replaced. Failure to follow these instructions could result in property damage and/or moderate personal injury.



ITT Industries

Bell & Gossett

USA
 Bell & Gossett
 8200 N. Austin Avenue
 Morton Grove, IL 60053
 Phone: (847) 966-3700
 Facsimile: (847) 966-9052
<http://www.bellgossett.com>



**ISO 9001
 Certified**

INTL.
 Bell & Gossett / Export Dept.
 8200 N. Austin Avenue
 Morton Grove, IL 60053
 Phone: (847) 966-3700
 Facsimile: (847) 966-8366
<http://www.bellgossett.com>

CANADA
 Fluid Products Canada
 55 Royal Road
 Guelph, Ontario,
 N1H 1T1, Canada
 Phone: (519) 821-1900