


CENTER CHANNEL REINSTALLATION



-Align the gasket with the center channel brackets and reinstall as shown.




-Secure all fasteners to 40-60 inch lbs.

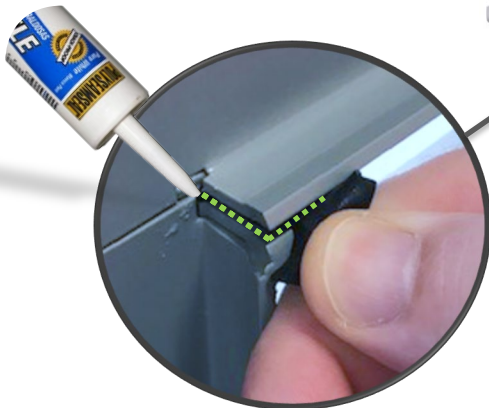

-Apply caulk to just the inside left and right sides of both the top and bottom gasket surface for added sealant.

-Gently peel back gasket and add caulk to door opening seams.

*Shown in green dashes - - - - -

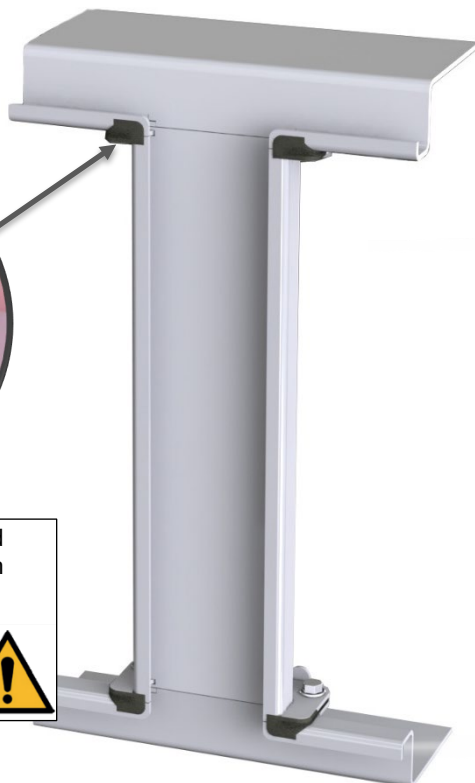

SCE-128380

14 Gauge Enclosures



SCE-127617

12 Gauge Enclosures