



# **V300**

# 10 A DPDT Enclosed Relay

## **Product Overview**

The Victory 300 Series 10 A DPDT pilot duty enclosed relays combine industrial strength and ease of use. The nipple mount enclosure makes installation easy. With no need for a dedicated field enclosure, they are the ideal retrofit devices. One coil input controls the state of two pilot rated contacts for the simultaneous control of two devices or both poles of a single-phase circuit, e.g. motor loads. Field-selectable high and low voltage coil inputs provide on-site versatility.

# **Product Identification**


Model	Relay	Coil	Amperage Rating	Relay Power LED	UL
V300	DPDT	20 to 30 Vac/dc, 120 Vac	10 A	Yes	Yes

Note: Some units are Plenum rated per UL 1995. For details, see White Paper VWP01, UL 1995 and Plenum Ratings, at www.veris.com.

# **Specifications**

Operating Temperature	-34 to 60 °C (-29 to 140 °F)
Operating Humidity	10 to 90% non-condensing
Expected Relay Life	Electrical (at rated current): 100,000 cycles Mechanical (unpowered): 10,000,000 cycles
Relay Status	LED ON=energized
Wire Lead Length	14" (356mm) min.
Wire Gauge	UL1015; Coil: 18AWG; Contacts: 16AWG
Insulation Class	600 Vac RMS
Agency Approvals	UL508 enclosed device listing, pollution degree 2

# **Dimensions**

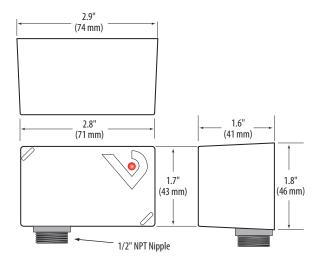




## Installation

#### Disconnect and lock out all power sources before beginning the installation.

- 1. Using the threaded nipple, connect the relay to the desired enclosure through a knock out hole.
- 2. Secure with the conduit nut provided.
- 3. Connect coil:
  - · Choose the coil common lead (white with yellow stripe) and connect it to the common (-) source termination point.
  - Choose either the low voltage (20-30VAC/DC, white with blue stripe) or high voltage (120VAC, white with black stripe) lead, depending on the application requirements, and connect it to the (+) source termination point.\*
- 4. Connect relay contacts:
  - Choose the relay common wire (yellow) and connect to the switched load.
  - Choose the relay N.O. (orange) and/or\* N.C. (blue) lead and connect to the switched load.
- 5. Secure the enclosure and reconnect power.

# Wiring Color Codes

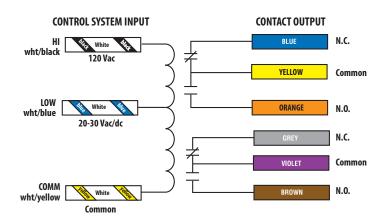

# Contact and Coil Specifications


TYPICAL COIL PER	RFORM	MANCE
Pull in Voltage	AC	DC
20-30 V	18	20
120 V	104	
Drop Out Voltage	AC	DC
20-30 V	4	5
120 V	26	
Voltage	Coil	Current
	AC	DC
24 V	43 mA	25 mA
30 V	54 mA	31 mA
120 V	29 mA	-

#### **CONTACT RATINGS\***


\*Contact ratings are for single pole operation. When operating both poles simultaneousley, the total load cannot exceed the ratings above.

# Wiring Examples

#### Nipple mount directly to a panel

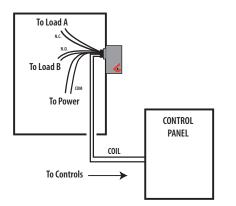

#### Nipple mount to a 2x or 4x electrical box

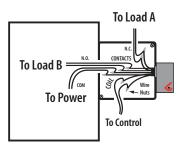

<sup>\*</sup> Isolate any unused wires, e.g. wire nut.

<sup>\*</sup> Isolate or insulate all non-terminated wires according to local electrical code requirements, i.e. wire nut.