

ZoneTight $^{\text{m}}$, 2-way, Internal thread

- For closed cold and warm water systems
- For modulating control of air-handling and heating systems on the water side
- Snap-assembly of the actuator





ype overview			
уре		DN	
2075QPT-G		20	
echnical data			
Functional data	Valve size [mm]	0.75" [20]	
Functional data	Fluid	chilled or hot water, up to 60% glycol	
	Fluid Temp Range (water)	36212°F [2100°C]	
	Differential pressure	550 psi	
	· · · · · · · · · · · · · · · · · · ·	·	
	Body Pressure Rating	360 psi	
	Close-off pressure Δps	200 psi	
	Flow characteristic	equal percentage	
	Angle of rotation note	Operating range 1590°	
	Pipe connection	Internal thread	
	 Installation orientation	NPT (female)	
		upright to horizontal (in relation to the stem	
	Servicing	maintenance-free	
	Flow Pattern	2-way	
	Leakage rate	0%	
	Controllable flow range	75°	
Materials	Valve body	forged brass	
	Stem	stainless steel	
	Stem seal	EPDM O-ring	
	Seat	PTFE, O-Ring EPDM	
	Characterized disc	incorporated into the ball	
	Diaphragm	EPDM	
	O-ring	EPDM	
	Ball	stainless steel	
Suitable actuators	Non Fail-Safe	CQB(X)	
	Electrical fail-safe	CQKB(X)	
Terms	Abbreviations	V'nom = nominal flow with valve completely opened V'max = maximum flow, set by the angle of	

rotation limitation on the actuator



Safety notes



- WARNING: This product can expose you to lead which is known to the State of California to cause cancer and reproductive harm. For more information go to www.p65warnings.ca.gov
- If temperature exceeds 212°F operating range due to a boiler control failure the valve will
 safely contain the hot water but manufacturers product warranty becomes invalid. Valve
 and actuator replacement is at the expense of others.

Product features

Application

The PIQCV zone valves with its pressure independent technology are suited for large commercial buildings where higher close-off and dynamic balancing is required. Common applications include unit ventilators, fan coil units, VAV reheat coils, fin tube casing, radiant panels and duct coils. The valve fits in space restricted areas and can be assembled without the use of tools.

Operating mode

The ball valve is adjusted by a rotary actuator. The actuator is controlled by a commercially available modulating or 3-point control system and moves the ball of the valve – the throttling device – to the position dictated by the control signal. Open the characterized control valve counterclockwise and close it clockwise.

Flow characteristic

Equal percentage flow control is ensured by the special design of the ball.


Constant flow volume

With a differential pressure of 16...350 kPa, a constant flow volume is achieved thanks to the integrated pressure regulating valve. Independently of the differential pressure through the valve, a valve authority of 1 is achieved. Even with pressure variations and in the partial load range, the flow rate remains constant with each respective opening position (angle of rotation) and ensures a steady control.

Installation notes

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

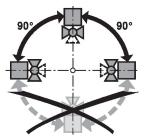

Water quality requirements

Belimo valves are regulating devices. For the valves to function correctly in the long term, they must be kept free from particle debris (e.g. welding beads during installation work). The installation of a suitable strainer is recommended.

Servicing

Ball valves and rotary actuators are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).


The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.



Installation notes

Flow direction

The direction of flow, specified by an arrow on the housing, is to be complied with, since otherwise the ball valve could become damaged. Please ensure that the ball is in the correct position (marking on the stem).

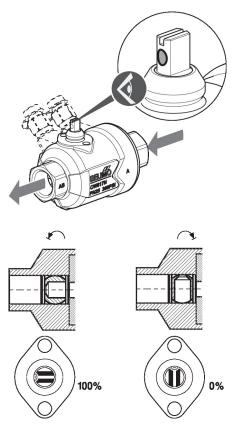


Flow setting

The angle of rotation of the CQ.. actuator can be changed by end stop clip in 2.5° increments. This is used to set the V'max value (maximum flow rate of the valve).

Remove end stop clip and place at desired position.

After every change of the flow setting by means of end stop clip, an adaptation must be triggered on the modulating actuators.

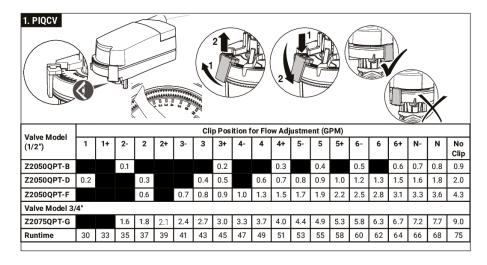

0.79 lb [0.36 kg]


Type DN Weight

20

Z2075QPT-G



Dimensions

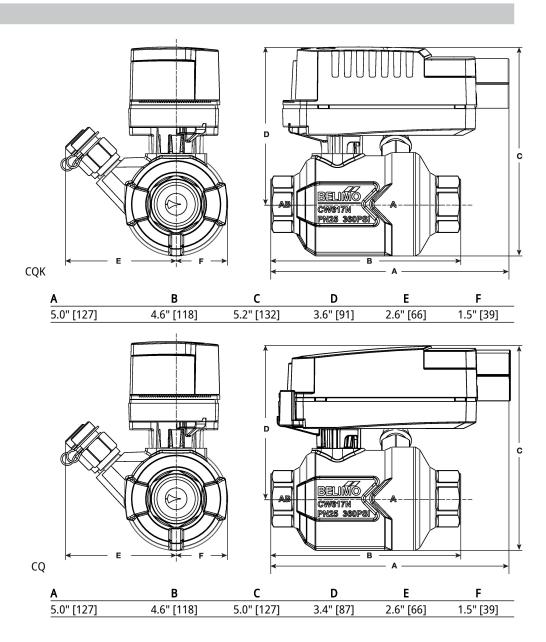



On/Off, Electrical fail-safe, 24 V

- Nominal voltage AC/DC 24 V
- Control On/Off
- Auxiliary switch 1x SPST





10	ch	n	2	ata
		ш	u con	 ala

_	
Flectri	ical dat

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	2.5 W
Power consumption in rest position	0.5 W
Transformer sizing	5 VA
Auxiliary switch	1x SPST, 1 A resistive @ DC 30 V
Switching capacity auxiliary switch	1 A resistive @ DC 30 V
Electrical Connection	22 GA plenum cable, 3 ft [1 m], with 1/2" NPT conduit connector
Overload Protection	electronic thoughout 090° rotation
Electrical Protection	actuators are double insulated

Functional data

Bridging time (PF)	2 s
Pre-charging time	520 s
Angle of rotation	90°
Angle of rotation note	adjustable with mechanical stop
Running Time (Motor)	75 s / 90°
Running time fail-safe	<60 s
Noise level, motor	35 dB(A)
Noise level, fail-safe	35 dB(A)
Position indication	pointer

Safety data

	•
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP40
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
Agency Listing	cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02 CE acc. to 2014/30/EU and 2014/35/EU
Quality Standard	ISO 9001
UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
Ambient humidity	Max. 95% RH, non-condensing
Ambient temperature	35104°F [240°C]
Storage temperature	-40176°F [-4080°C]
Servicing	maintenance-free



Technical data

Weight	Weight	0.57 lb [0.26 kg]
Materials	Housing material	UL94-5VA

Product features

Application

Electrical fail-safe On/Off ZoneTight actuator.

Valve selection should be done in accordance with the flow parameters and system specifications. The actuator is mounted directly to the valve without the need for tools or additional linkage.

The actuator operates in response to AC/DC 24 V.

Angle of rotation is adjustable with the integrated mechanical stop.

Electrical installation

INSTALLATION NOTES

Actuators with appliance cables are numbered.

Provide overload protection and disconnect as required.

Actuators may be connected in parallel. Power consumption and input impedance must be observed.

Actuators may also be powered by DC 24 V.

Actuators with plenum cable do not have numbers; use color codes instead.

One built-in auxiliary switch, 1x SPST 1 A @ DC 30 V (resistive load), for end position indication, interlock control, fan startup, etc.

Meets cULus requirements without the need of an electrical ground connection.

Apply only AC line voltage or only UL-Class 2 voltage to the terminals of auxiliary switches. Mixed or combined operation of line voltage/safety extra low voltage is not allowed.

Warning! Live electrical components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

